

NAV-TV

INTERFACING THE FUTURE

100 NW 11th Street, Boca Raton, FL 33432 TEL 561-955-9770 FAX 561-955-9760

www.nav-tv.com info@nav-tv.com

OPV-iR Flo TV Addendum

With the OPV installed into the vehicle, the user will be able to utilize the on-screen TV preset buttons, as well as their steering wheel buttons to control FLO TV. FLO TV's wired and wireless remote will still be functional along with the vehicle's controls. The OPV will also allow instant access to presets 1-6 stored in the Flo TV module (please refer to the Flo TV user's manual for preset programming instructions.)

Operation:

Button	Function
1-6	Flo TV presets 1-6
7	Channel Guide
8	OK
9	Source (A/V In) Select
<	Channel down
>	Channel up

- Note: The Auto and Manual buttons do not have a function.



Installation:

- Find a good location to mount the Flo TV unit.
- Cut open the wire sheathing of the wired remote at the 8 pin connector.
- Find the green wire located at pin 8; cut this wire in half.
- Using the supplied Diodes, install the first diode inline of the wired remote. The band side of the diode goes **TOWARDS** the remote.
- The second diode gets spliced in between the connector and the diode going towards the remote. The band side goes **AWAY** from the green wire. The band side of the 2nd diode goes to the white wire of the 3.5mm jack (tip of the jack).
- Connect the Flo TV ground to a good chassis ground. Connect the power wire to the White/Blue wire in the VTC-R harness.
- Audio is connected to the OPV-iR module and Video is connected behind the screen, as per the OPV-iR instructions.
- Finish installation and test.

