

# NAV-TV

INTERFACING THE FUTURE


3950 NW 120th Ave, Coral Springs FL 33065 TEL: 561.955.9770

## OPI-M/OPI-P

NTV-KIT149/KIT150

**NOTE:** This kit is not compatible with iOS7.

### Installation Steps

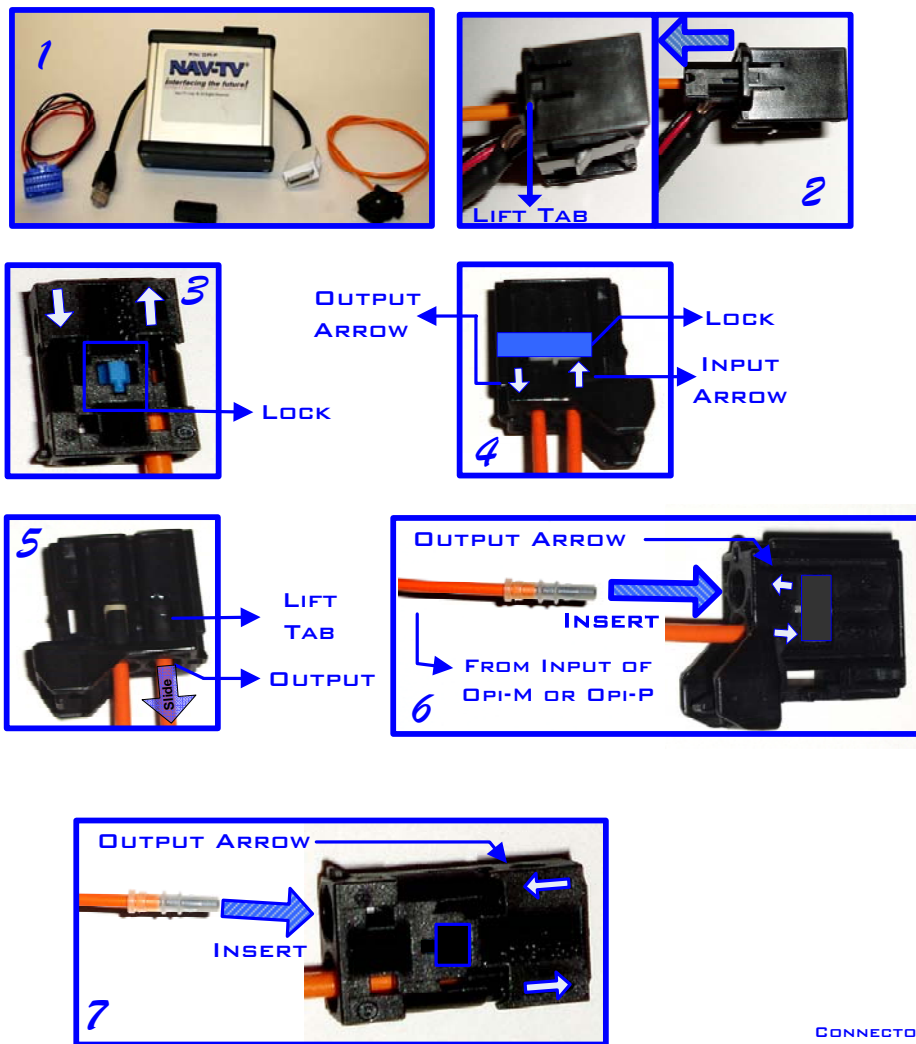

**STEP 1:** REMOVE NAVIGATION SCREEN AND RADIO TUNER TO BEGIN INSTALL. UNPLUG SCREEN AND RADIO TUNER AND SET IT ASIDE.

**STEP 2:** USE A PICK TOOL TO LIFT TAB AND GENTLY TUG THE INSERT OUT OF THE OPI-M OR OPI-P PLUG.

**STEP 3:** ON THE OPI-M OR OPI-P OPTICAL PLUG USE A PICK TOOL TO PRESS THE BLUE LOCK DOWN FROM THE SIDE ILLUSTRATED ABOVE AND REMOVE LOCK.

**STEP 4:** ON THE FACTORY OPTICAL PLUG, REPEAT PREVIOUS STEP (REMOVE LOCK).



**STEP 5:** ON THE FACTORY OPTICAL PLUG, LIFT TAB UP TO ALLOW THE FIBER OPTIC LEAD TO SLIDE OUT OF THE FACTORY PLUG ON THE OUTPUT SIDE.

**STEP 6:** ON THE FACTORY OPTICAL PLUG, INSERT OPTICAL LEAD FROM THE INPUT OF THE OPI-M OR OPI-P CONNECTOR INTO THE OUTPUT OF THE FACTORY CONNECTOR ( ↑ TO ↓ ).

**STEP 7:** ON THE OPI-M OR OPI-P OPTICAL PLUG, TAKE THE OPTICAL LEAD THAT YOU'VE JUST REMOVED FROM THE OUTPUT OF THE FACTORY CONNECTOR AND INSERT IT INTO OUTPUT OF THE OPI-M OR OPI-P CONNECTOR.

**STEP 8:** PLUG EVERYTHING BACK IN MAKING SURE THAT ALL OPTICAL LEADS ARE LOCKED INTO PLACE AND THAT THE LOCKS THEMSELVES ARE IN PLACE.

**RED WIRE:** + 12 V CONSTANT POWER  
**BLACK WIRE:** GROUND

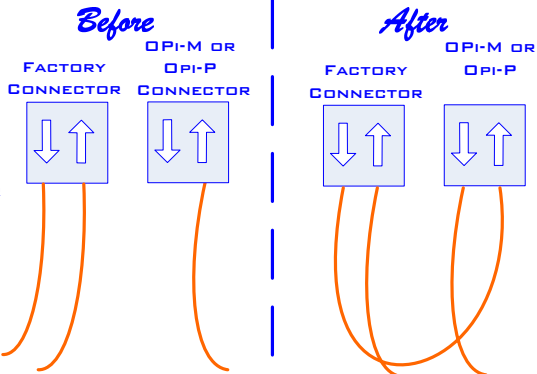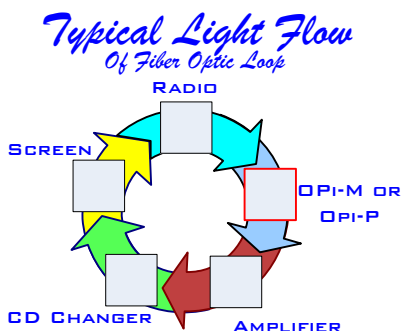


# NAV-TV

INTERFACING THE FUTURE

3950 NW 120th Ave, Coral Springs FL 33065 TEL: 561.955.9770

## QUICK REFERENCE WIRING DIAGRAM

### BEFORE OPI-P INSTALLATION:

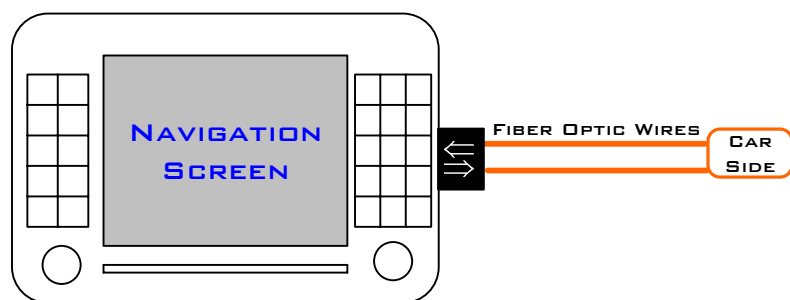

**NOTE: Select the <Extras...> option by pressing # 6 on the keypad will take you to the Extras menu:**

Version Date, Radio control of iPod, Manual control of iPod, and AUX In mode of the interface for external audio source (AUX In cable sold separately by request when ordering the OPI-Kit)

### AFTER OPI-P INSTALLATION:

