





indulge your imagination

CAN Bus Filter Installation

Instructions For Maserati

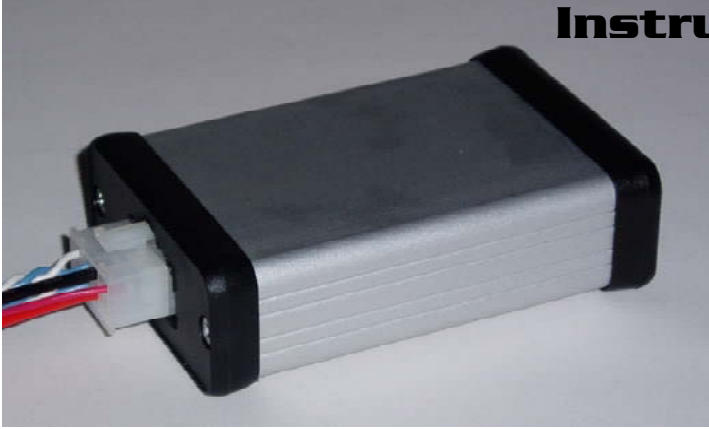

Red: Constant Power
 Black: Ground
 Red w/white: Video in Motion Trigger
 Twisted White and Black: CAN Bus

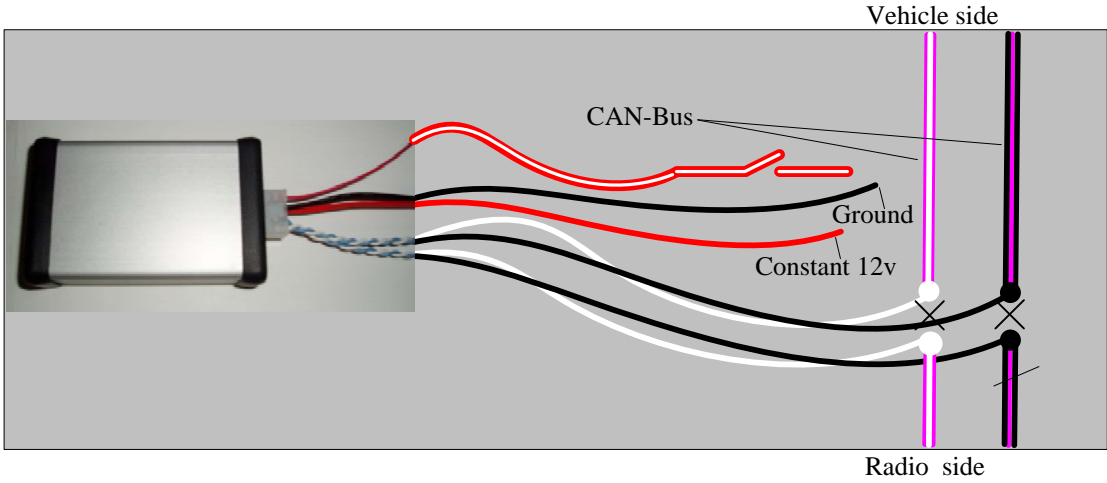

All wire connections **must** be soldered. The **red w/white** wire must be connected to 12 volts through a toggle switch. This toggle switch will activate video in motion. Please note: If the toggle switch is in the "on" position, navigation may not be functioning to it's full capacity until the toggle switch is back in the "off" position.

CAN-Bus wiring

Once the Radio is removed, you'll notice a label on the top side of the chassis of the radio. Take note of the the pinouts of the 2 wires marked "B CAN+" and "B CAN-". These 2 wires are the CAN-Bus wires. They need to be cut and connected to the Twisted pairs of Black and White wires of our CAN-bus Filter according to the table chart to the right. There is no "input" and "output" for the CAN-bus wires since the Filter is designed to detect which is in and out. Please note that the color of the B CAN wires vary sometimes, but you can always use the pinout label on top of the radio.

Pink/White	Black/Pink
Twisted White Nav-TV	Twisted Black Nav-TV